

AX 342

Process Indicator with 2 Analogue Inputs,
2 Presets, Relay Outputs and
Serial RS232 / RS485 Interface



- Two analogue inputs with independent scaling, each +/- 10V or 0/4 – 20 mA
- Operating modes for display of input A or input B or the combinations [A + B], [A - B], [A x B] and [A : B]
- Useful supplementary functions like Tare function, programmable averaging functions, programmable linearization etc.
- Aux. output 24 V DC / 100 mA for sensor supply

Operating Instructions



Safety Instructions

- This manual is an essential part of the unit and contains important hints about function, correct handling and commissioning. Non-observance can result in damage to the unit or the machine or even in injury to persons using the equipment!
- The unit must only be installed, connected and activated by a qualified electrician
- It is a must to observe all general and also all country-specific and application-specific safety standards
- When this unit is used with applications where failure or mal-operation could cause damage to a machine or hazard to the operating staff, it is indispensable to meet effective precautions in order to avoid such consequences
- Regarding installation, wiring, environmental conditions, screening of cables and earthing, you must follow the general standards of industrial automation industry
- - Errors and omissions excepted –



General instructions for cabling, screening and grounding can be found in the SUPPORT section of our website <http://www.motrona.com>

| Version: | Description: |
|------------------------|---------------|
| AX34209a/tj/hk/05_2011 | First edition |
| | |
| | |
| | |

Table of Contents

| | | |
|-----------|--|-----------|
| 1. | Introduction | 4 |
| 2. | Electrical Connections | 5 |
| 2.1. | Power supply | 6 |
| 2.2. | Aux. voltage output | 6 |
| 2.3. | Analogue measuring inputs | 6 |
| 2.4. | Relay Outputs | 6 |
| 2.5. | Serial RS232 / RS485 interface (AX 348 only)..... | 7 |
| 3. | Jumper settings..... | 8 |
| 4. | How to Operate the Keys | 10 |
| 4.1. | Normal display state | 10 |
| 4.2. | Parameter settings | 11 |
| 4.3. | Teach operation | 12 |
| 4.4. | Set all parameters to "Default" | 12 |
| 4.5. | Code Locking of the Keypad | 12 |
| 5. | The Parameter Menu | 13 |
| 5.1. | Overview of Basic Parameters: | 13 |
| 5.2. | Overview of Operational Parameters | 14 |
| 6. | Setting of Parameters..... | 15 |
| 6.1. | Basic Parameters | 15 |
| 6.2. | Operational parameters..... | 16 |
| 6.3. | Modes of operation | 17 |
| 6.4. | Additional settings for the Preselections and Relays..... | 20 |
| 6.5. | Parameters for the Serial Interface..... | 23 |
| 7. | Commissioning | 27 |
| 8. | Special Functions..... | 28 |
| 8.1. | Tare / Offset function | 28 |
| 8.2. | Linearization | 28 |
| 8.3. | Manual input or „Teaching“ of the interpolation points | 30 |
| 8.4. | Overflow and Underflow Control | 32 |
| 9. | Technical Appendix | 33 |
| 9.1. | Parameter Lists | 33 |
| 9.2. | Dimensions | 35 |
| 9.3. | Technical data | 36 |
| 9.4. | Commissioning Form | 37 |

1. Introduction

Some of the general demands to an up-to-date process controller for automation industry are always high flexibility, combined with easy and simple operability.



Many applications require two separate analogue inputs for use with single or combined operation.

Also it may be important to display and evaluate both, linear and non-linear analogue inputs at an acceptable accuracy, which requires programmable linearization functions.

Process controllers of series AX 342 have been designed for this kind of requirements. Moreover, these units also provide 2 programmable presets with relay outputs and a serial RS232 / RS485 interface.

2. Electrical Connections

Terminal assignments and wiring example

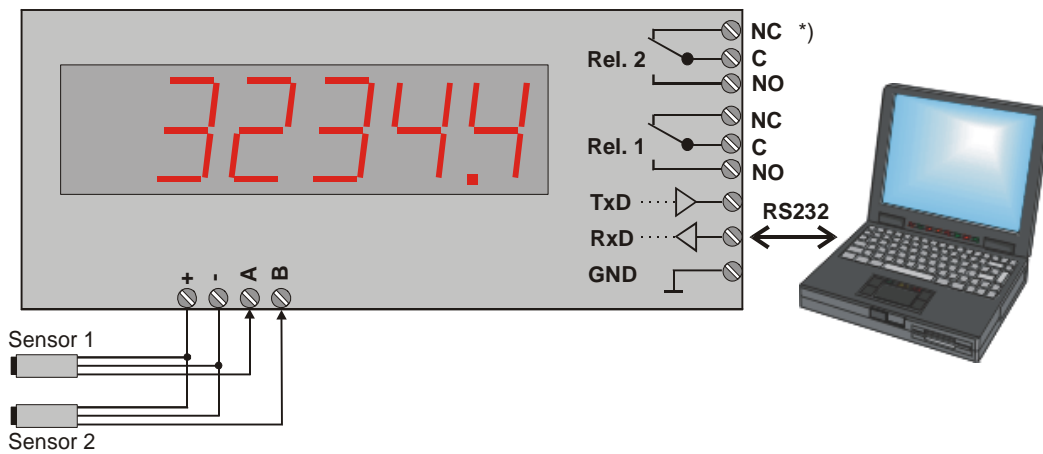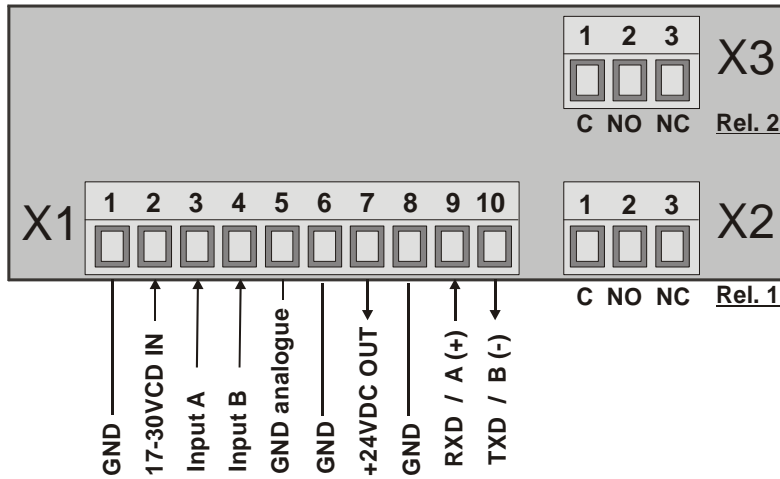

*) Contact positions are shown in powerless state



- When earthing any of the GND terminals, please be aware that all terminals marked GND or AGND will be earthed.
- Multiple earthing on different positions of an installation may cause problems, especially with poor overall performance of the whole earthing and screening system!
- The minus potential of analogue inputs is internally connected to the minus of the DC supply. When you like to loop current signals through several units, it is therefore necessary to supply each unit from a separate, potential-separated DC source.

2.1. Power supply

The unit operates from a DC power with 17 to 30 VDC applied via terminals 1 and 2. The consumption depends on the level of the supply voltage (typical 80 mA at 30V or 130mA at 17V, plus current taken from the aux. output).

2.2. Aux. voltage output

Terminal 7 provides an auxiliary output of 24 V DC / 100 mA max. for supply of sensors and encoders. This voltage is independent from the level of the input voltage.

2.3. Analogue measuring inputs

There are two analogue inputs with common minus potential available (Input A and Input B). Both refer to the AGND potential of terminal 5 which is internally connected to terminals 1, 6 and GND.

The analogue inputs can be configured for voltage input (+/- 10 V) or current input (0/4 – 20 mA) by means of internal jumpers.



Ex factory, both inputs are always configured for current input.
(see section 3 for jumper settings)





2.4. Relay Outputs

The two output relays provide individually programmable switching characteristics. It is recommended to use additional filter components for external coils when switching inductive loads. The switching capability of the dry relay contacts is either 250 VAC / 1 A / 250 VA or 100 VDC / 1 A / 100 W

The relays operate with a typical delay time of 60 ms (see chapter **Fehler! Verweisquelle konnte nicht gefunden werden.**)

2.5. Serial RS232 / RS485 interface (AX 348 only)

Ex factory the unit is set to RS232 communication. This setting can be changed to RS485 (2-wire) by means of an internal DIL switch. To access the DIL switch, you must remove the screw terminal connectors and the backplane. Then pull the board to the rear to remove the PCB from the housing.

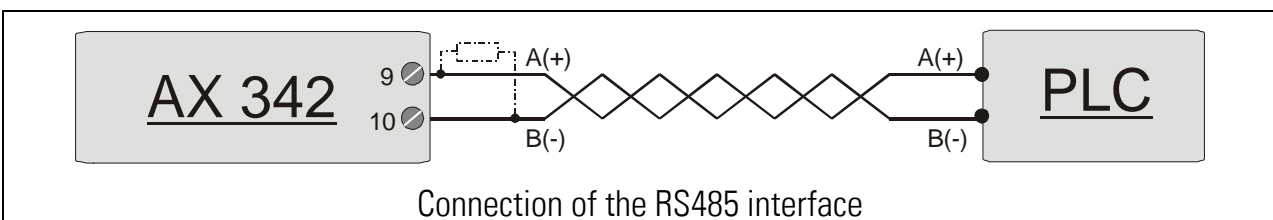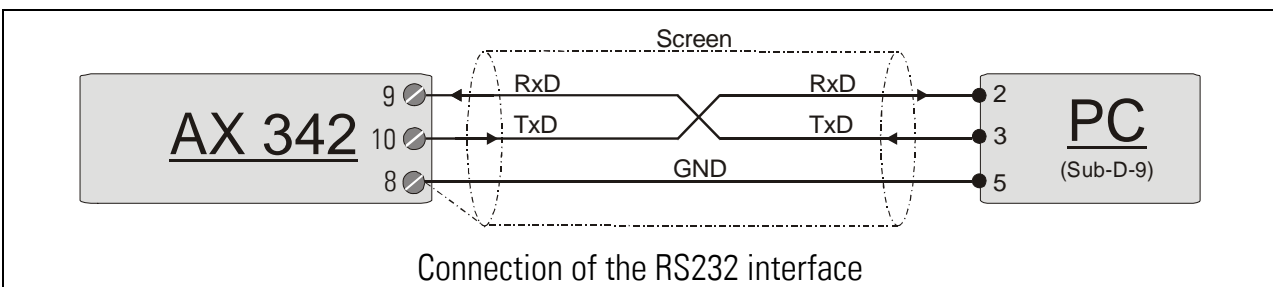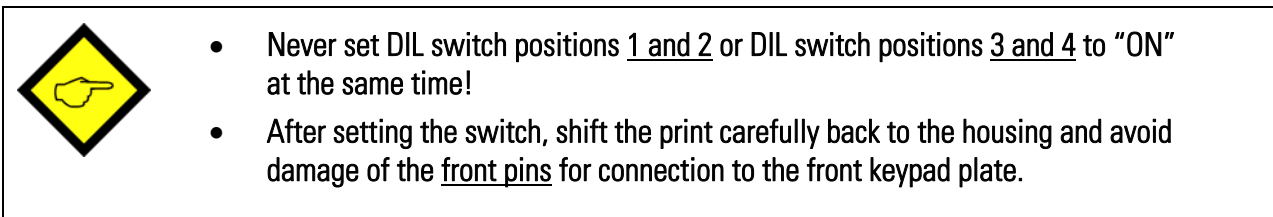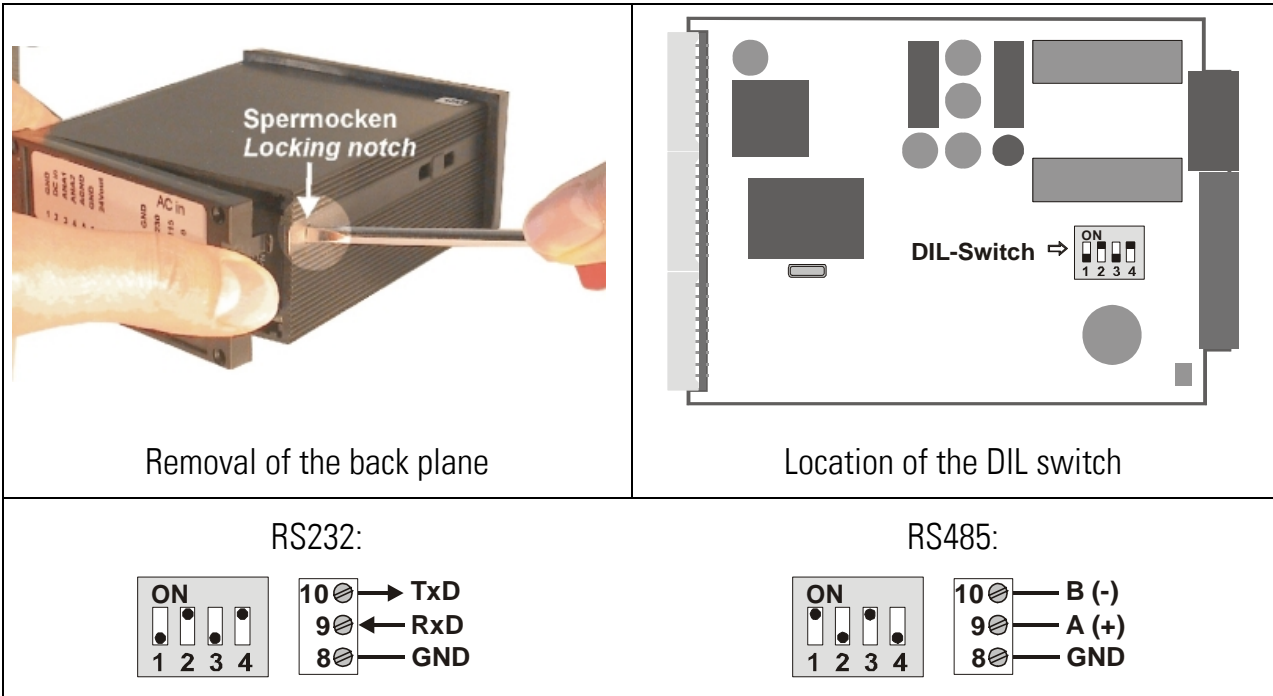


3. Jumper settings

When your input signal is a current of 0-20 mA or 4-20 mA, there is no need to change jumper settings and you can skip this section.

Where however you intend to use one or both inputs for voltage signals, you must change the internal jumper settings correspondingly.

To access the jumpers, you have to disconnect the rear screw terminal strips, remove the back plane from the unit and pull the PCB out of the housing

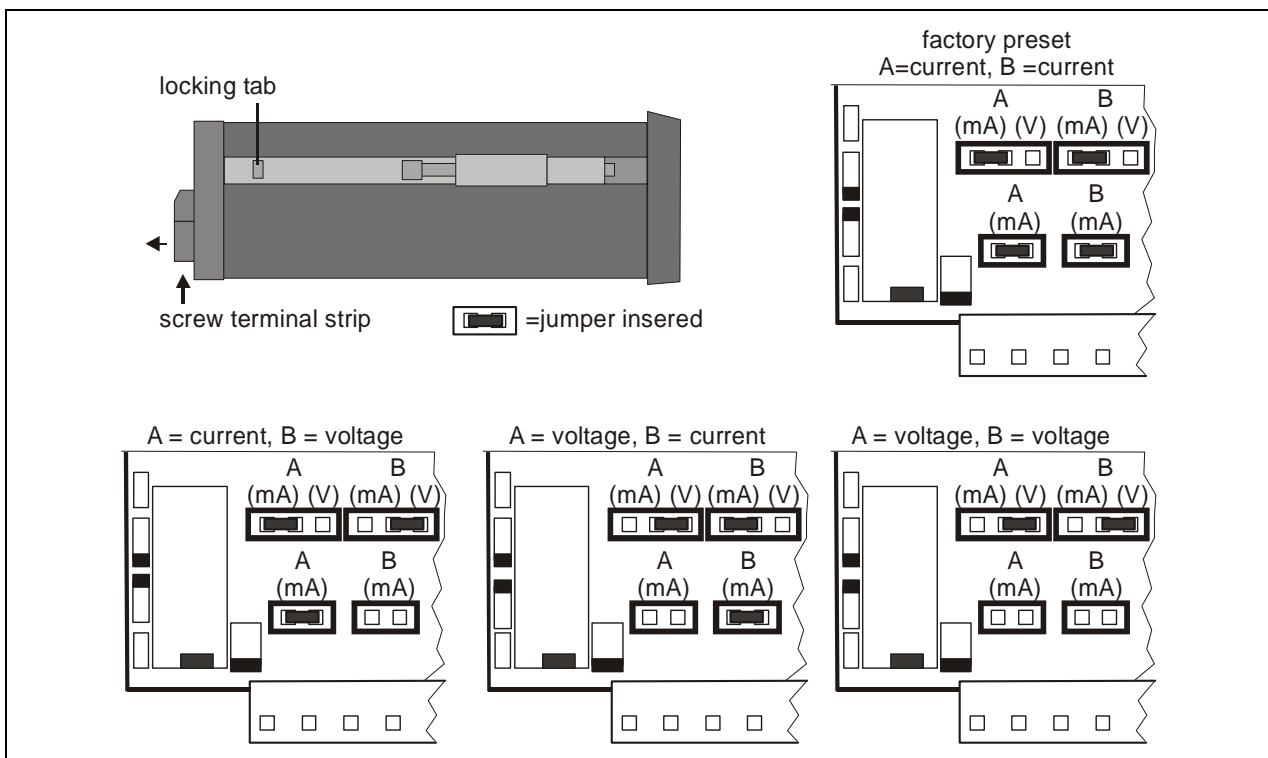

Wrong jumper settings may cause serious damage to the unit!

After setting the jumpers, please shift the print carefully back to the housing, in order not to damage the front pins for connection to the keypad plate.



Current inputs are automatically scaled to an input range of 0/4 – 20 mA.
Voltage inputs use the standard range of +/- 10V.

You are free to measure voltages up to 120 volts DC by use of a remote resistance in series to the input line (please observe applicable safety standards!). You can calculate the value from the formula

$$R_x [k\Omega] = 3 \times V_x [V] - 30$$

R = resistance value
V = input voltage

Example: Desired input = 100 volts:
 $R = [3 \times 100] - 30 (k\Omega) = 270 k\Omega$

With regard to the scaling procedure described later, the new maximum input with resistance will work like a 10 volts signal with no resistance

4. How to Operate the Keys

The unit uses 3 front keys for all setup operations. Subsequently, the key functions will be named as shown in the table below.



The functions of the keys are depending on the actual operating state of the unit.

The following three operating states apply:

- **Normal display state**
- **Setup state**
 - a.) Basic setup
 - b.) Operational parameter setup
- **Teach operation**

4.1. Normal display state



You can change over to the other states while the unit is in the normal display state only.

| Change over to | Key operation |
|-----------------------------|--|
| Basic setup | Keep ENTER and SET down simultaneously for 3 seconds |
| Operational parameter setup | Keep ENTER down for 3 seconds. |
| Teach operation | Keep SET down for 3 seconds |

The Cmd key is only used for execution of the Tare function, the Reset function and for Teaching the interpolation points for linearization (see section 8).

4.2. Parameter settings

4.2.1. How to select a parameter

The ENTER key will scroll through the menu. The SET key allows to select the corresponding item and to change the setting or the numeric value. After this, the selection can be stored by ENTER again, which automatically changes over to the next menu item.

4.2.2. How to change parameter settings

With numerical entries, at first the lowest digit will blink. When keeping the SET key down, the highlighted digit will scroll in a continuous loop from 0 ... 9 ... 0 ... 9. When you release the SET key, the actual digit will remain and the next digit will be highlighted (blink).

This procedure allows setting all digits to the desired values. After the most significant digit has been set, the low order digit will blink again and you can do corrections if necessary.

With signed parameters, the high order digit will only scroll between the values "0" (positive) and "-" (negative)

4.2.3. How to store settings

To store the actual setting, press the ENTER key, which will also automatically scroll forward the menu.

The unit changes from programming mode to normal operation when you keep down the ENTER key again for at least 3 seconds.

4.2.4. Time-out function

The "time-out" function will automatically conclude every menu level, when for a break period of 10 seconds no key has been touched. In this case, any entry which has not been confirmed by ENTER yet would remain unconsidered.

4.3. Teach operation



The Time-out function will be switched off during all Teach operations

| Key | Function |
|-----|--|
| | ENTER will conclude or abort any Teach operation in progress |
| | SET function is fully similar to normal set-up operation |
| | Cmd will store the display value to the register and will change over to the next interpolation point. |

For details of the Teach procedure see section 8.3.

4.4. Set all parameters to “Default”

At any time you can return all settings to the factory default values.

The factory default settings are shown in the parameter listings in section 6.



When you decide to set all parameters to „default“, please be aware that all previous settings will be lost and you will need to do the whole set-up procedure once more

To execute the „Default“ setting function:

- Power the unit down.
- Press the ENTER key.
- Power the unit up again while the ENTER key is kept down

4.5. Code Locking of the Keypad

When the code locking of the keypad has been switched on, any key access first results in display of



To access the menu you must press the key sequence



within 10 seconds, otherwise the unit will automatically return to the normal display mode.

5. The Parameter Menu

The menu provides one section with “basic parameters” and another section with “operational parameters”. On the display you will only find those parameters which have been enabled by the basic settings. E.g. when the Linearization Functions have been disabled in the basic set-up, the associated linearization parameters will also not appear in the parameter menu.

All parameters, as good as possible, are designated by text fragments. Even though the possibilities of forming texts are very limited with a 7-segment display, this method has proved to be most suitable for simplification of the programming procedure.

The subsequent table is to show the general structure of the whole menu only. Detailed descriptions of all parameters will follow in section 6.

5.1. Overview of Basic Parameters:

| | |
|-----------------------|--------------------------------------|
| General: | Mode of operation |
| | Brightness of the display |
| | Update time of the display |
| | Access code |
| | Mode of linearization |
| | Definition of command key function |
| Preselections: | Signal source of relay 1 |
| | Switching characteristics of relay 1 |
| | Signal source of relay 2 |
| | Switching characteristics of relay 2 |
| | Hysteresis of relay 1 |
| | Hysteresis of relay 2 |
| Communication: | Serial unit number |
| | Serial communication format |
| | Serial baud rate |

5.2. Overview of Operational Parameters

| | Single Mode | Dual Mode | Combined Modes |
|---------------------|----------------|-------------|----------------|
| Setpoints | Preselection 1 | | |
| | Preselection 2 | | |
| Display and Scaling | „inPutA" | „inPutA" | „inPutA" |
| | „StArtA" | „StArtA" | „StArtA" |
| | „End A" | „End A" | „End A" |
| | „dPoi A" | „dPoi A" | „dPoi A" |
| | „FiLt A" | „FiLt A" | „FiLt A" |
| | "OFFS A" *) | "OFFS A" *) | |
| | | „inPutb" | „inPutb" |
| | | „StArtb" | „StArtb" |
| | | „End b" | „End b" |
| | | „dPoi b" | „dPoi b" |
| | „FiLt b" | „FiLt b" | |
| | OFFS b" *) | | |
| | | „n) FAc" | |
| | | „d FAc" | |
| | | „P FAc" | |
| | | „dPoint" | |
| Interface | Serial Timer | | |
| | Serial Mode | | |
| | Serial Code | | |
| Linearization | P01_H **) | | |
| | P01_Y **) | | |
| | ... | | |
| | P16_H **) | | |
| | P16_Y **) | | |

*) appears only when the Offset function has been enabled

**) appears only when the linearization is switched on

6. Setting of Parameters

6.1. Basic Parameters

In general, the parameters described subsequently must be set with the very first commissioning of the unit only. For best comprehensibility, this section describes setup of all display functions only first. Settings applicable to relay outputs and serial interface are described separately.

Keep ENTER and SET down simultaneously for 3 seconds to access the basic parameters.

| Menu Text | | Default |
|-----------------------------------|--|---------------|
| Mode of operation | <div style="border: 1px solid black; padding: 2px; display: inline-block;">SINGLE</div> Single input operation (input A only) <div style="border: 1px solid black; padding: 2px; display: inline-block;">dUAL</div> Dual input operation (input A and input B separately) <div style="border: 1px solid black; padding: 2px; display: inline-block;">A + b</div> Sum operation (input A + input B) <div style="border: 1px solid black; padding: 2px; display: inline-block;">A - b</div> Differential operation (input A – input B) <div style="border: 1px solid black; padding: 2px; display: inline-block;">A ÷ b</div> Dividing operation (ratio A : B) <div style="border: 1px solid black; padding: 2px; display: inline-block;">A × b</div> Multiplying operation (product A x B) | SINGLE |
| Brightness of the display | „ 100“ 100% of maximum brightness „ 80“ 80% of maximum brightness „ 60“ 60% of maximum brightness „ 40“ 60% of maximum brightness „ 20“ 20% of maximum brightness | „100“ |
| Update time of the display | Updates the display every x.xxx seconds. Setting range from 0.050 to 5.999 seconds. | „0.300“ |
| Keypad interlock code | <div style="border: 1px solid black; padding: 2px; display: inline-block;">no</div> Keypad enabled continuously <div style="border: 1px solid black; padding: 2px; display: inline-block;">ALL</div> Keypad locked for any access <div style="border: 1px solid black; padding: 2px; display: inline-block;">P_FREE</div> Keypad locked, except for access to preselections Pres 1 und Pres 2 | no |
| Mode of linearization | <div style="border: 1px solid black; padding: 2px; display: inline-block;">no</div> No linearization. The corresponding parameters will not appear in the menu. <div style="border: 1px solid black; padding: 2px; display: inline-block;">1-9UA</div> Linearization for the numeric range 0 – 99999. Interpolation points to be set in the positive range only (negative values will appear as a mirror). <div style="border: 1px solid black; padding: 2px; display: inline-block;">4-9UA</div> Linearization over the full range –99999 to +99999 | no |

| Menu Text | | Default |
|-------------|---|------------|
| Crnd | Command key enable | off |
| | off The Command key is switched off and no Offset values will appear in the menu | |
| | offset The Cmd key will execute the Tare/Offset function | |
| | teach The Cmd key will execute the Teach function | |
| | both The Cmd key will execute both, the Tare and the Teach function | |

6.2. Operational parameters

After the basic setup, you can access the operational parameters by pressing ENTER for at least 3 seconds. You will only find those parameter texts that are relevant for your mode of operation.

To exit the menu, keep again ENTER down for at least 3 seconds, or just wait for the automatic Time-Out function.

6.3. Modes of operation

6.3.1. Single mode (input A only)

| Menu Text | Setting Range | Default |
|--|------------------|------------------------------------|
| INPut A <u>Input A range</u> Set the desired range for input A <input type="text" value="in U"/> Voltage +/-10V <input type="text" value="in 10"/> Current 0-20 mA <input type="text" value="in 14"/> Current 4-20 mA | | <input type="text" value="in 10"/> |
| StArT A <u>Start value A</u> Value which the unit will display with a zero input signal of 0 volts or 0/4 mA | -99999 ... 99999 | 0 |
| End A <u>End value A</u> Value which the unit will display with a full scale input of 10 volts or 20 mA | -99999 ... 99999 | 1000 |
| dPo, A <u>Decimal point for signal A</u> Select the desired position of the decimal point 000000 No decimal point 00000.0 one decimal position ----> 0.00000 five decimal positions | | 00000.0 |
| F,lt A <u>Average filter input A</u> Adjustable floating average filter for smoothing the display with unsteady input signals <input type="text" value="off"/> No filtering 2,4,8,16 Number of floating averaging cycles | | <input type="text" value="off"/> |
| OFFS A <u>Offset value for input A *)</u> Offset value for the zero displacement of input A signals | -99999 ... 99999 | 0 |
| *) When the Tare function is switched on only | | |

6.3.2. Dual Mode (Inputs A and B separately)




With this mode, the SET key selects between display of channel A and display of channel B, and the bar of the high order LED indicates which of the two channels is actually in display.

| Menu Text | | Input Range | Default |
|----------------|--|------------------|--------------|
| Input b | <p>Input B range Set the desired range for input B</p> <p>in U Voltage +/-10V</p> <p>in .0 Current 0-20 mA</p> <p>in .4 Current 4-20 mA</p> | | in .0 |
| Start b | <p>Start value B Value which the unit will display with a zero input signal of 0 volts or 0/4 mA</p> | -99999 ... 99999 | 0 |
| End b | <p>End value B Value which the unit will display with a full scale input of 10 volts or 20 mA</p> | -99999 ... 99999 | 1000 |
| dPo. b | <p>Decimal point for signal B Select the desired position of the decimal point</p> <p>000000 No decimal point</p> <p>00000.0 one decimal position</p> <p>----></p> <p>0.00000 five decimal positions</p> | | 000000 |
| Flt b | <p>Average filter input B Adjustable floating average filter for smoothing the display with unsteady input signals</p> <p>off No filtering</p> <p>2,4,8,16 Number of floating averaging cycles</p> | | off |
| OFFS b | <p>Offset value for input B *) Offset value for the zero displacement of input A signals</p> | -99999 ... 99999 | 0 |


*) When Tare function is switched on only

6.3.3. Combined Modes [A + B], [A - B], [A : B], [A x B]

These modes allow displaying either the single channels A and B or the calculated result according to the selected combination. The SET key allows scrolling between the three displays.

A →  The upper bar of the high order digit indicates that you display channel A.

B →  The lower bar of the high order digit indicates channel B.

<AB>  When no bar is lit, the display shows the result of the calculation, according to the combination set.

When you use one of the combined modes, you will first have to do the same settings as with the “Dual” mode for individual display of inputs A and B.

The combined display will then be the result calculated from both single values.

The following additional parameters provide a final scaling facility, so you can read out the result of your combination in proper engineering units:

| Menu Text | Setting Range | Default |
|--|------------------|---------|
| nn FAc <u>Proportional Scaling Factor</u> Multiplies the result by this setting | -10000 ... 10000 | 1000 |
| d FAc <u>Reciprocal Factor</u> Divides the result by this setting | 1 ... 99999 | 1000 |
| P FAc <u>Additive Constant</u> Adds or subtracts this setting | -99999 ... 99999 | 0 |
| dPo, nt <u>Decimal Point</u> Sets the decimal point for the combined display value 000000 No decimal point 00000.0 one decimal position ----> 0.00000 five decimal positions | | 000000 |

Calculation Formula:

$$\boxed{\text{Final display value}} = \boxed{\text{value calculated from [A*B]}} \times \frac{\boxed{m_Fac}}{\boxed{d_Fac}} \pm \boxed{P_Fac}$$

6.4. Additional settings for the Preselections and Relays

6.4.1. Basic settings:

The basic setup menu provides the following additional parameters which are relevant for the operation of the presets and relays only:

| Menu Text | | Setting Range | Default |
|---------------|--|---|---------------|
| Src 1 | Signal source of Relay 1 Relay 1 depends on analogue input A Relay 1 depends on analogue input B *) Relay 1 depends on the combination [A,B] of both analogue inputs **) | In A In b In A_b | In A |
| CHAR 1 | Relay 1 switching characteristics _J_ GE Greater/Equal: Relay is statically active with display greater or equal Preset. _J_ LE Lower/Equal: Relay is statically active with display lower or equal Preset. _N_ GE Greater/Equal: Relay is dynamically active with display greater or equal Preset. (timed output impulse) _N_ LE Lower/Equal: Relay is dynamically active with display lower or equal Preset. (timed output impulse) | | _J_ GE |
| Src 2 | Signal source of Relay 2 Relay 2 depends on analogue input A Relay 2 depends on analogue input B *) Relay 2 depends on the combination [A,B] of both analogue inputs **) | In A In b In A_b | In A |


*) Requires Analogue input B to be activated (i.e. operating mode setting "Dual" or "Combined")

***) Requires operating mode setting "Combined"

| Menu Text | | Setting Range | Default |
|--|---|---------------|---------------|
| CHAR 2 | Relay 2 switching characteristics | | _J_ GE |
| | _J_ GE See above | | |
| | _J_ LE See above | | |
| | _N_ GE See above | | |
| | _N_ LE See above | | |
| | _J_ 1-2 Relay is statically active when the display reaches the value of Preset 1 – Preset 2 *) | | |
| | _N_ 1-2 Relay is dynamically active when the display reaches the value of Preset 1 – Preset 2 *) | | |
| HYS1 | Switching Hysteresis 1 Programmable Hysteresis for relay 1 | 0 ... 99999 | 0 |
| HYS2 | Switching Hysteresis 2 Programmable Hysteresis for relay 2 | 0 ... 99999 | 0 |
| *) Serves to generate an anticipation signal at a fixed distance to the preset 1 signal. The anticipation automatically follows the settings of preset 1. | | | |

6.4.2. Characteristics of the switching hysteresis

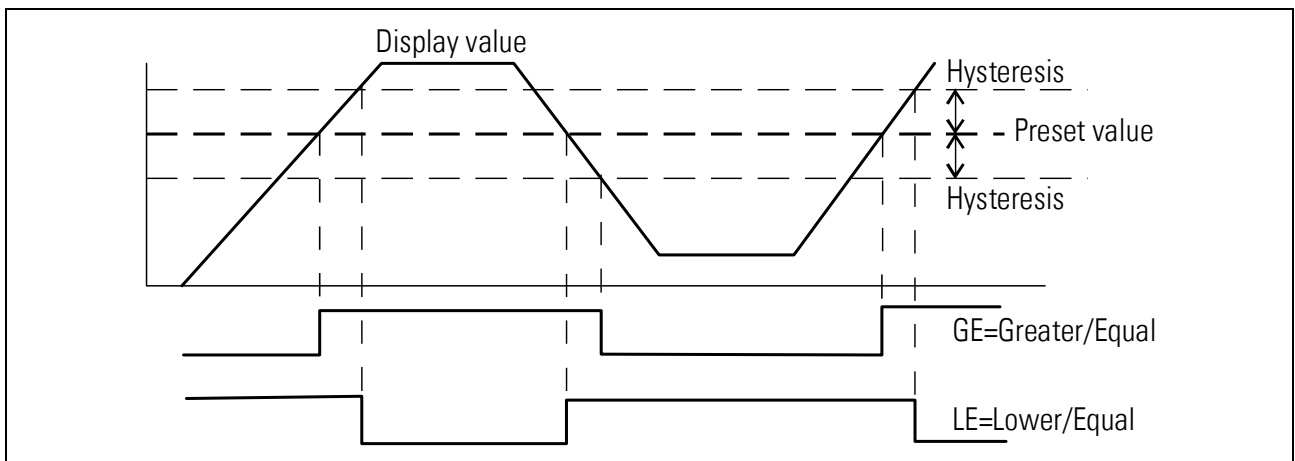

The direction of operation of the Hysteresis setting depends on the selected switching characteristics „GE“ or „LE“ and is explained in the figure below:



Where the switching outputs have been set to dynamic operation, the output impulse time is always 500 msec. (fixed time, factory adjustable only)





6.4.3. Operational settings for presets:

The settings for the Preselection values appear at the beginning of the operational parameters:

| Menu Text | | Setting Range | Default |
|--|----------------|------------------|---------|
|  PrES.1 | Preselection 1 | -99999 ... 99999 | 10000 |
|  PrES.2 | Preselection 2 | -99999 ... 99999 | 5000 |

6.4.4. Actual switching state of the relays

At any time you can find out the actual switching state of the relays. For this, just push the ENTER key shortly during normal operation. The display will then provide one of the following information for the next two seconds:

| Display | Meaning |
|--|---------------------------------|
|  1.2oFF | Both relays are OFF |
|  1.2on | Both relays are ON |
|  1 on | Relay 1 is ON Relay 2 is OFF |
|  2on | Relay 1 is OFF Relay 2 is ON |



When Preset 1 is used to monitor a minimum value with setting "LE", and Preset 2 is used to monitor a maximum value with setting "GE", then output 1 will operate with an **Automatic Startup-Inhibit**, i.e. it will become enabled only after the measuring value has crossed the minimum setting the first time.

Where no startup-Inhibit is desired, please use Preset 1 for Maximum and Preset 2 for Minimum control.

6.4.5. Response time of the relays

The response time of the relays is fully independent of the selected update time for the display. With operating mode "Single" the response time of the outputs is typically 60 msec (provided that average filter and linearization function are switched off)



Use of the average filter and the linearization function may extend the response time of the relays correspondingly. When the fastest possible response of the outputs is important, please make sure that these two functions are switched off.

6.5. Parameters for the Serial Interface

6.5.1. Communication settings in the Basic Menu:

| Menu | | Setting Range | Default |
|---------------|--|--|--|
| S-Unit | Unit Number You can assign any unit number between 11 and 99. The address must however <u>not</u> contain a "0" because such numbers are reserved for collective addressing of several units. | 0..99 | 11 |
| S-Form | Serial Data Format The first character indicates the number of data bits. The second character specifies the Parity Bit „Even“, "Odd" or no Parity Bit. The third character indicates the number of Stop Bits. | <div style="border: 1px solid black; padding: 2px; display: inline-block;">7 E 1</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">7 E 2</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">7 0 1</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">7 0 2</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">7 no 1</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">7 no 2</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">8 E 1</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">8 0 1</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">8 no 1</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">8 no 2</div> | <div style="border: 1px solid black; padding: 2px; display: inline-block;">7 E 1</div> |
| S-bAUD | Baud Rate The following Baud Rates can be set for communication: | <div style="border: 1px solid black; padding: 2px; display: inline-block;">9600</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">4800</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">2400</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">1200</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">600</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">19200</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">38400</div> | <div style="border: 1px solid black; padding: 2px; display: inline-block;">9600</div> |

6.5.2. Operational Parameters for configuration of the interface:

| Menu | | Setting Range | Default | | | | | | | | | | | | | | | | | | | | | |
|--------------------------------|---|---|---------------------------------|-------|----------------------|------|-----|---------------------|-----|------|---------------------|------|----|-------------------|-----|-------|-------------------|--|-----------|--------------------------------|-----|----|-------------------|-----|
| S-t int | <p>Serial Timer: Setting 0,000 allows manual activation of a serial data transmission at any time. All other settings specify the cycle time for automatic transmission, when the interface is set to "Printer Mode"</p> <p>Between two transmission cycles the unit will allow a pause depending on the baud rate. The minimum cycle times for timer transmissions are shown in the table.</p> <table border="1"> <thead> <tr> <th>Baud Rate</th> <th>Minimum Cycle Time [ms]</th> </tr> </thead> <tbody> <tr><td>600</td><td>384</td></tr> <tr><td>1200</td><td>192</td></tr> <tr><td>2400</td><td>96</td></tr> <tr><td>4800</td><td>48</td></tr> <tr><td>9600</td><td>24</td></tr> <tr><td>19200</td><td>12</td></tr> <tr><td>38400</td><td>6</td></tr> </tbody> </table> | Baud Rate | Minimum Cycle Time [ms] | 600 | 384 | 1200 | 192 | 2400 | 96 | 4800 | 48 | 9600 | 24 | 19200 | 12 | 38400 | 6 | 0,000 0,010 sec ... 9.999 sec | 0,100 sec | | | | | |
| Baud Rate | Minimum Cycle Time [ms] | | | | | | | | | | | | | | | | | | | | | | | |
| 600 | 384 | | | | | | | | | | | | | | | | | | | | | | | |
| 1200 | 192 | | | | | | | | | | | | | | | | | | | | | | | |
| 2400 | 96 | | | | | | | | | | | | | | | | | | | | | | | |
| 4800 | 48 | | | | | | | | | | | | | | | | | | | | | | | |
| 9600 | 24 | | | | | | | | | | | | | | | | | | | | | | | |
| 19200 | 12 | | | | | | | | | | | | | | | | | | | | | | | |
| 38400 | 6 | | | | | | | | | | | | | | | | | | | | | | | |
| S-mode | <p>Serial Mode:</p> <p>PC: Operation according to communication profile (see 6.5.3)</p> <p>Print1: Transmission of string type 1 (see 6.5.4)</p> <p>Print2: Transmission of string type 2 (see 6.5.4)</p> | <input type="text" value="PC"/> <input type="text" value="Print 1"/> <input type="text" value="Print 2"/> | <input type="text" value="PC"/> | | | | | | | | | | | | | | | | | | | | | |
| S-Code | <p>Serial Register-Code: Specifies the register code of the data to be transmitted. The most important register codes are:</p> <table border="1"> <thead> <tr> <th>Register</th> <th>S-Code</th> <th>ASCII</th> </tr> </thead> <tbody> <tr><td>Actual display value</td><td>101</td><td>:1</td></tr> <tr><td>Analogue input A *)</td><td>106</td><td>:6</td></tr> <tr><td>Analogue input B *)</td><td>107</td><td>:7</td></tr> <tr><td>Display channel A</td><td>113</td><td>;3</td></tr> <tr><td>Display channel B</td><td>114</td><td>;4</td></tr> <tr><td>Display channel [A,B] combined</td><td>115</td><td>;5</td></tr> </tbody> </table> | Register | S-Code | ASCII | Actual display value | 101 | :1 | Analogue input A *) | 106 | :6 | Analogue input B *) | 107 | :7 | Display channel A | 113 | ;3 | Display channel B | 114 | ;4 | Display channel [A,B] combined | 115 | ;5 | 100 ... 120 | 101 |
| Register | S-Code | ASCII | | | | | | | | | | | | | | | | | | | | | | |
| Actual display value | 101 | :1 | | | | | | | | | | | | | | | | | | | | | | |
| Analogue input A *) | 106 | :6 | | | | | | | | | | | | | | | | | | | | | | |
| Analogue input B *) | 107 | :7 | | | | | | | | | | | | | | | | | | | | | | |
| Display channel A | 113 | ;3 | | | | | | | | | | | | | | | | | | | | | | |
| Display channel B | 114 | ;4 | | | | | | | | | | | | | | | | | | | | | | |
| Display channel [A,B] combined | 115 | ;5 | | | | | | | | | | | | | | | | | | | | | | |

*) Normalized analogue input values, scaling 0 ... 10 000 for 0% to 100% of full scale input signal

6.5.3. PC-Mode

Communication with PC - Mode allows free readout of all parameters and registers of the unit. The subsequent example shows the details of communication for serial readout of the actual display value.

The general string to initiate a request has the following format:

| EOT | AD1 | AD2 | C1 | C2 | ENQ |
|----------------------------------|-----|-----|----|----|-----|
| EOT = Control Character (Hex 04) | | | | | |
| AD1 = Unit Address, High Byte | | | | | |
| AD2 = Unit Address, Low Byte | | | | | |
| C1 = Register Code, High Byte | | | | | |
| C2 = Register Code, Low Byte | | | | | |
| ENQ = Control Character (Hex 05) | | | | | |

Example:

Request string for readout of the actual display data from a unit with serial address No. 11:

| | | | | | | |
|---------------------|-----------|-----------|-----------|-----------|-----------|-----------|
| ASCII-Code: | EOT | 1 | 1 | : | 1 | ENQ |
| Hexadecimal: | 04 | 31 | 31 | 3A | 31 | 05 |
| Binary | 0000 0100 | 0011 0001 | 0011 0001 | 0011 1010 | 0011 0001 | 0000 0101 |

With a correct request the unit will respond with the adjoining response string. Leading zeros will be suppressed. BCC provides a „Block Check Character“, formed by Exclusive-OR of all characters from C1 through ETX.

| STX | C1 | C2 | x x x x x x x | ETX | BCC |
|----------------------------------|----|----|---------------|-----|-----|
| STX = Control Character (Hex 02) | | | | | |
| C1 = Register Code, High Byte | | | | | |
| C2 = Register Code, Low Byte | | | | | |
| x x x x x = Data (display value) | | | | | |
| ETX = Control Character (Hex 03) | | | | | |
| BCC = Block Check Character | | | | | |

With inaccurate request strings the unit would only respond "STX C1 C2 EOT" or just "NAK".

Assumed that the actual display value is "-180", the response of the unit would be

| | | | | | | | | | |
|--------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|
| ASCII | STX | : | 1 | - | 1 | 8 | 0 | ETX | BCC |
| Hex | 02 | 3A | 31 | 2D | 31 | 38 | 30 | 03 | 1C |
| Bin | 0000 0010 | 0011 1010 | 0011 0001 | 0010 1101 | 0011 0001 | 0011 1000 | 0011 0000 | 0000 0011 | 0001 1100 |

Again, the block check character "BCC" is calculated from the Exclusive-OR of all characters from C1 through ETX.

6.5.4. Printer Mode

The Printer Mode allows cyclic or manual activation of transmissions of the specified register data. The corresponding register can be specified by means of parameter „S-Code“.

Another parameter named „S-mod“ allows selection between two different string types:

| „S-mod“ | Transmission String Type | | | | | | | | | |
|----------|--------------------------|------|------|---|---|---|---|-----------------|-----------|-----------------|
| „Print1“ | Space | Sign | Data | | | | | | Line feed | Carriage return |
| | | +/- | X | X | X | X | X | X | LF | CR |
| „Print2“ | Sign | Data | | | | | | Carriage return | | |
| | +/- | X | X | X | X | X | X | CR | | |

The mode of activation of serial transmissions can be determined as follows:

| | |
|------------------------------------|--|
| Cyclic (timed) transmissions: | Set the Serial Timer to any value ≥ 0.010 sec. Select the desired string type by parameter "S-mod" After exit from the menu the transmissions will start automatically |
| Manual activation of transmissions | Set the Serial Timer to 0.000. Select the desired string type by parameter "S-mod" After exit from the menu a transmission can be activated at any time by shortly pressing the ENTER key |

7. Commissioning

Commissioning of this unit is easy and uncomplicated when following the subsequent steps:

| | Step | Action | See section |
|---|-------------------------|--|--|
| 1 | Analogue inputs | <ul style="list-style-type: none">• Set jumpers | 3 |
| 2 | Basic settings | <ul style="list-style-type: none">• Select Operation mode• Keep linearization and Tare function off firstly | 6.1 6.1 |
| 3 | Parameter settings | <ul style="list-style-type: none">• Configuration of the analogue inputs, scaling of the display• Select combination and final scaling (if applicable)• Configuration of relay outputs• Configuration of the serial interface | 6.3.1 and 6.3.2 6.3.3 6.4 6.5 |
| 4 | Supplementary functions | <ul style="list-style-type: none">• Set Tare function and Linearization (if applicable) | 8 |

A Set-Up Form is available in the appendix of this manual, which may be used for a most convenient and clearly arranged setup procedure.

It is advisable to do settings for Tare and linearization functions quite at the end, after all other functions have already proved to work fine.

8. Special Functions

8.1. Tare / Offset function

This function will become active after the "Cmd" parameter has been set to "oFFSEt" or to "both"(see 6.1). As a result, every touch of the "Cmd" key will store the actual display value to the Offset register, resulting in a Zero display with the actual input signal.

8.2. Linearization

This function allows converting non-linear input signals into a linear presentation or vice-versa. There are 16 interpolation points available, which can be freely arranged over the whole measuring range in any distance. Between two points the unit automatically will interpolate straight lines.


For this reason it is advisable to set many points into areas with strong bending, and to use only a few points in areas with little bending. „Linearization Mode“ has to be set to either „1-quA“ or „4-quA“ to enable the linearization function (see subsequent drawing). This will change the linear measuring results into a non-linear display.

Parameters **P01_x** to **P16_x** select 16 x- coordinates, representing the display values which the unit would normally show in the display. With parameters **P01_y** to **P16_y** you can specify now, which values you would like to display instead of the corresponding _x values.

This means e.g. that the unit will replace the previous P02_x value by the new P02_y value.




- With respect to the consistency of the linearization, the x- registers have to use continuously increasing values, e.g. the x- registers must conform to the constraint $P01_X < P02_X < \dots < P15_X < P16_X$.
- Independent of the selected linearization mode, the possible setting range of all registers P01_x, P01_y, ..., P16_x, P16_y is always -99999 ... 99999.
- For measuring values lower than P01_x, the linearization result will always be P01_y.
- For measuring values higher than P16_x, the linearization result will always be P16_y.
- With operation modes "Single" and "Dual", all linearization refers to input channel A only.
- With all combined operation modes, linearization refers to the calculated final result of the selected combination.

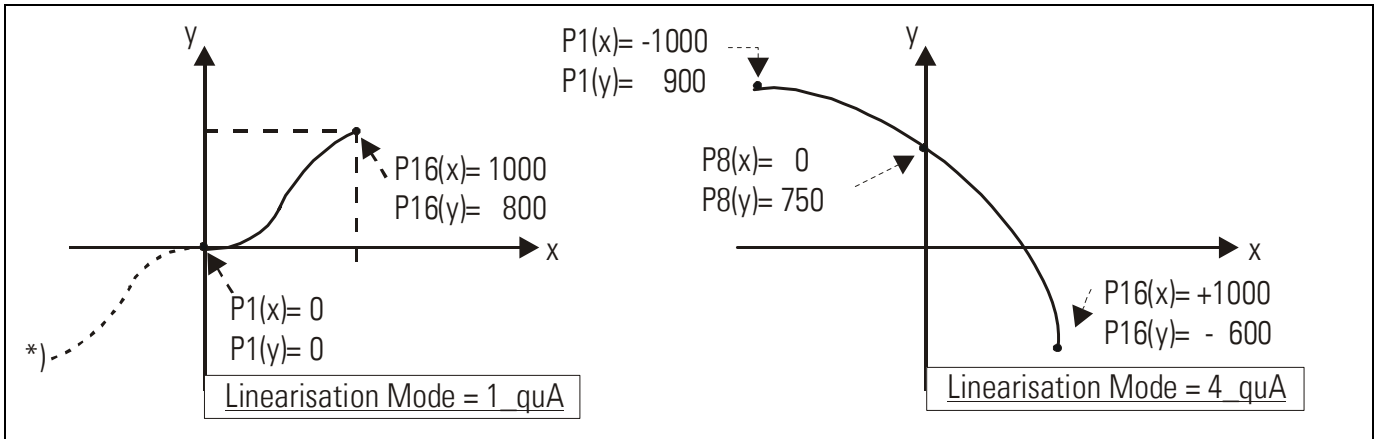

Application Example:

We like to display the filling quantity (volume) of a tank as shown below, with use of a pressure sensor mounted to the bottom of the tank. With this application the analogue pressure signal is proportional to the filling level, but not to the filling quantity.

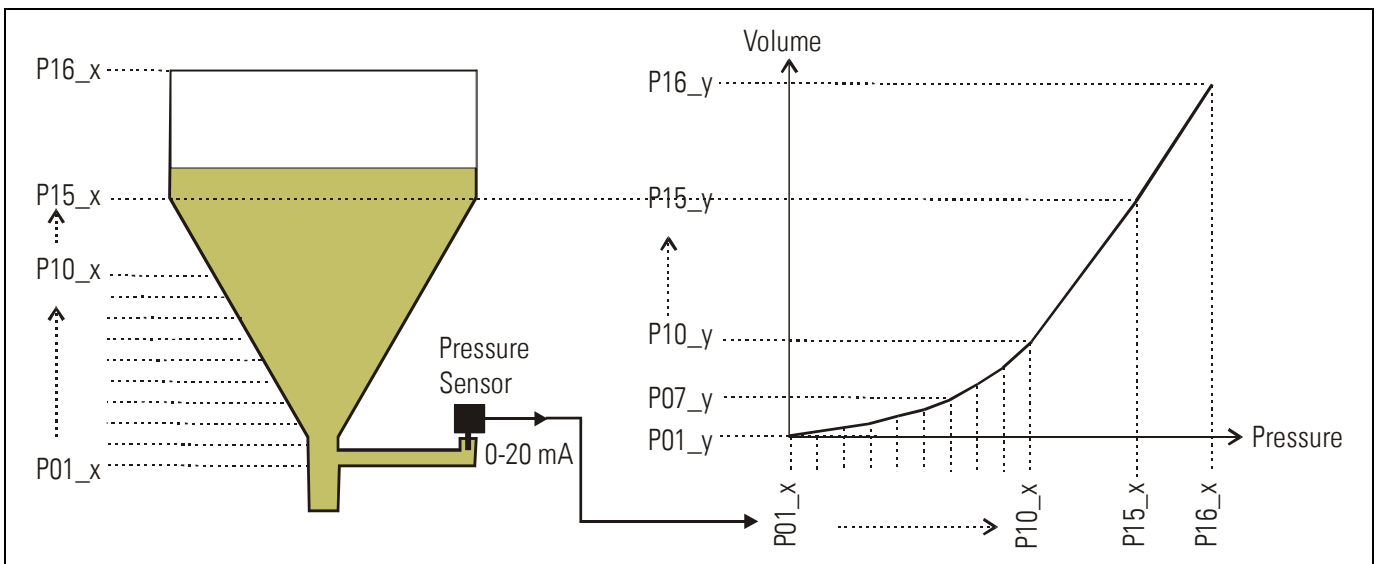

To solve the problem, we divide the non-linear part of the tank into 14 parts. We enter the expected display values of the pressure sensor to registers $P01_x$ to $P15_x$. For the linear part of the tank it is sufficient to store the final pressure value to register $P16_x$. Now we can easily calculate the appropriate filling quantities and enter these values to the registers $P01_y$ to $P16_y$.

8.3. Manual input or „Teaching“ of the interpolation points

Interpolation points to form the linearization curve can be entered one after another, using the same procedure as for all other numeric parameters. This means you will enter all parameters P01_x to P16_x and P01_y to P16_y manually by keypad.



During manual input of interpolation points the unit will not examine the settings P01_x to P16_x. Therefore the operator is responsible to observe the constraint

$$P01_X < P02_X < \dots < P15_X < P16_X.$$

In many cases it should however be more convenient to use the Teach function. Here you have to sequentially apply all the x-values to the analogue input, and just add the corresponding y-values by keypad.

Preparation for teaching:

- Please select the desired range of linearization (see section 6.1).
- Please set the basic parameter „Cmd“ to „tEACH“ or „both“ (see section 6.1). After this, the teach function is ready to start.

How to use the Teach Function:

- Hold down the „Cmd“ key for 3 seconds, until the display shows „tEACH“. Now you are in the Teach mode.

To exit the teach mode again, you have the following two possibilities:

1. Press the enter key for 2 seconds. On the display you will read „StOP“ for a short time, and then the unit will switch back to the normal mode.
2. Just do nothing. After 10 seconds the unit will switch back to the normal mode automatically. In both cases the parameters of linearization P01_X to P16_Y will not change.

- To start the teach procedure please press „Cmd“ again within the next 10 seconds. The display will show „P01_X“.



With respect to the consistency of the linearization, all parameters from P01_X to P16_Y will be overwritten by suitable initial values.

Initial values for „P01_X“ and „P01_Y“ are -99999, all other values will start with 99999

- Press once more „Cmd“ to display the actual analogue input signal. Now arrange for the desired analogue input signal of the first interpolation point (with combined modes please arrange for both analogue signals)

- When you read the x-value of your first interpolation point in the display, press "Cmd" again. This will automatically store the actual display value to the P01_x register, and for about 1 second you will read "P01_y " on the display, followed again by the same reading stored previously.
- This display value now can be edited to the desired P01_y value, like a regular parameter
- When you read the desired P01_y value in your display, store it by pressing "Cmd" again. This will automatically cycle the display to the next interpolation point P02_x.



The unit will examine the constraint valid for the x-values of interpolation points. Every interpolation point must be higher than its preceding point.

Where this constraint is breached, all 6 decimal points will blink automatically as a warning. Pressing the CMD key will not store the illegal value, but result in an error text "E.r.r.-.L.O." as a warning.

- Once you have reached and stored the last interpolation points P16_x/y, the routine will restart with P01_x again, and you are free to double-check your settings once more.
- To conclude the Teach procedure, press the ENTER key. As a result you will read "StOP" for about 2 seconds, before the unit returns to the normal operation. All linearization points will at the same time be finally stored.

8.4. Overflow and Underflow Control

The unit continuously monitors both input channels for possible overflow or underflow situations (input signal out of specified range)

Overflow: the analogue input signal is greater than +10,2 V or +20,4 mA

Underflow: the analogue input signal is lower than -10,2 V or -0,4 mA

Any out-of-range situation will cause a message according the table below:

| Display | Input A | Input B |
|---------|-----------|-----------|
| 1Lo | Underflow | o.k |
| 1Hi | Overflow | o.k |
| 2Lo | o.k | Underflow |
| 2Hi | o.k | Overflow |
| 1Lo2Lo | Underflow | Underflow |
| 1Hi2Lo | Overflow | Underflow |
| 1Lo2Hi | Underflow | Overflow |
| 1Hi2Hi | Overflow | Overflow |

9. Technical Appendix

9.1. Parameter Lists

9.1.1. General

| Function | Text | Min. value | Max. value | Default | Ser. Code |
|-----------------------|---------|------------|------------|---------|-----------|
| Operating Mode | mode | 0 | 5 | 0 | 0 |
| Brightness of Display | briGht | 0 | 4 | 0 | 1 |
| Display Update Time | UPdAtE | 50 | 5999 | 300 | 28 |
| Keypad Locking | CodE | 0 | 2 | 0 | 20 |
| Key Command | Cmd | 0 | 3 | 0 | D3 |
| Range Input A | inPut A | 0 | 2 | 1 | 6 |
| Start Input A | StArt A | -99999 | 99999 | 0 | 7 |
| End Input A | End A | -99999 | 99999 | 1000 | 8 |
| Dec. Point Input A | dPoi A | 0 | 5 | 1 | 10 |
| Average Input A | Filt A | 0 | 4 | 1 | 9 |
| Offset Input A | OFFS A | -99999 | 99999 | 0 | D4 |
| Range Input B | inPut B | 0 | 2 | 1 | 11 |
| Start Input B | StArt B | -99999 | 99999 | 0 | 12 |
| End Input B | End B | -99999 | 99999 | 1000 | 13 |
| Dec. Point Input B | dPoi B | 0 | 5 | 0 | 15 |
| Average Input B | Filt B | 0 | 4 | 0 | 14 |
| Offset Input B | OFFS B | -99999 | 99999 | 0 | D5 |
| Proportional Factor | M FAc | -10000 | 10000 | 1000 | 3 |
| Reciprocal Factor | D FAc | 1 | 99999 | 1000 | 4 |
| Additive Constant | P FAc | -99999 | 99999 | 0 | 5 |
| Dec. Point | dPoint | 0 | 5 | 0 | 2 |

9.1.2. Presets / Relays

| Function | Text | Min. value | Max. value | Default | Ser. Code |
|----------------------|-------|------------|------------|---------|-----------|
| Preselection Value 1 | PrES1 | -99999 | 99999 | 10000 | 16 |
| Preselection Value 2 | PrES2 | -99999 | 99999 | 5000 | 17 |
| Source 1 | Src 1 | 0 | 2 | 0 | D6 |
| Preselection Mode 1 | CHAr1 | 0 | 3 | 0 | 18 |
| Source 2 | Src 2 | 0 | 2 | 0 | D7 |
| Preselection Mode 2 | CHAr2 | 0 | 5 | 0 | 19 |
| Hysteresis 1 | HYSt1 | 0 | 99999 | 0 | 21 |
| Hysteresis 2 | HYSt2 | 0 | 99999 | 0 | 22 |



9.1.3. Serial Interface

| Function | Text | Min. value | Max. value | Default | Ser. Code |
|------------------|--------|------------|------------|---------|-----------|
| Serial Timer (s) | S-tin) | 0 | 9999 | 100 | 38 |
| Serial Mode | S-n)od | 0 | 2 | 0 | 39 |
| Serial Code | S-CodE | 100 | 120 | 101 | 40 |
| Serial Unit Nr | S-Unit | 0 | 99 | 11 | 90 |
| Serial Format | S-Forn | 0 | 9 | 0 | 92 |
| Serial Baud rate | S-bAUd | 0 | 6 | 0 | 91 |

9.1.4. Linearization

| Function | Text | Min. value | Max. value | Default | Ser. Code |
|----------|--------|------------|------------|---------|-----------|
| L_Mode | LrnodE | 0 | 2 | 0 | D2 |
| P1(x) | P01_H | -99999 | 99999 | 99999 | A0 |
| P1(y) | P01_Y | -99999 | 99999 | 99999 | A1 |
| P2(x) | P02_H | -99999 | 99999 | 99999 | A2 |
| P2(y) | P02_Y | -99999 | 99999 | 99999 | A3 |
| P3(x) | P03_H | -99999 | 99999 | 99999 | A4 |
| P3(y) | P03_Y | -99999 | 99999 | 99999 | A5 |
| P4(x) | P04_H | -99999 | 99999 | 99999 | A6 |
| P4(y) | P04_Y | -99999 | 99999 | 99999 | A7 |
| P5(x) | P05_H | -99999 | 99999 | 99999 | A8 |
| P5(y) | P05_Y | -99999 | 99999 | 99999 | A9 |
| P6(x) | P06_H | -99999 | 99999 | 99999 | B0 |
| P6(y) | P06_Y | -99999 | 99999 | 99999 | B1 |
| P7(x) | P07_H | -99999 | 99999 | 99999 | B2 |
| P7(y) | P07_Y | -99999 | 99999 | 99999 | B3 |
| P8(x) | P08_H | -99999 | 99999 | 99999 | B4 |
| P8(y) | P08_Y | -99999 | 99999 | 99999 | B5 |
| P9(x) | P09_H | -99999 | 99999 | 99999 | B6 |
| P9(y) | P09_Y | -99999 | 99999 | 99999 | B7 |
| P10(x) | P10_H | -99999 | 99999 | 99999 | B8 |
| P10(y) | P10_Y | -99999 | 99999 | 99999 | B9 |
| P11(x) | P11_H | -99999 | 99999 | 99999 | C0 |
| P11(y) | P11_Y | -99999 | 99999 | 99999 | C1 |
| P12(x) | P12_H | -99999 | 99999 | 99999 | C2 |
| P12(y) | P12_Y | -99999 | 99999 | 99999 | C3 |
| P13(x) | P13_H | -99999 | 99999 | 99999 | C4 |
| P13(y) | P13_Y | -99999 | 99999 | 99999 | C5 |
| P14(x) | P14_H | -99999 | 99999 | 99999 | C6 |
| P14(y) | P14_Y | -99999 | 99999 | 99999 | C7 |
| P15(x) | P15_H | -99999 | 99999 | 99999 | C8 |
| P15(y) | P15_Y | -99999 | 99999 | 99999 | C9 |
| P16(x) | P16_H | -99999 | 99999 | 99999 | D0 |
| P16(y) | P16_Y | -99999 | 99999 | 99999 | D1 |

9.2. Dimensions

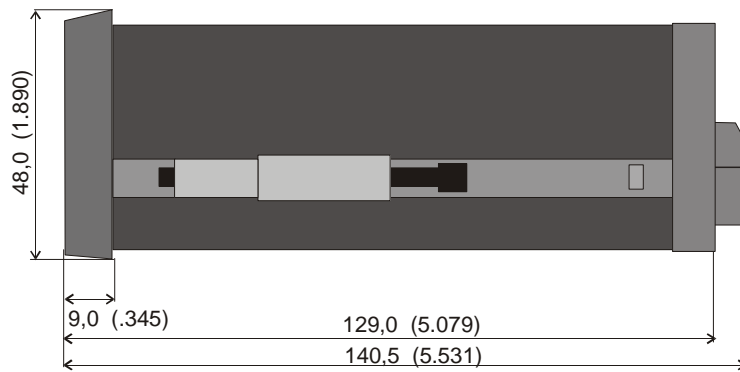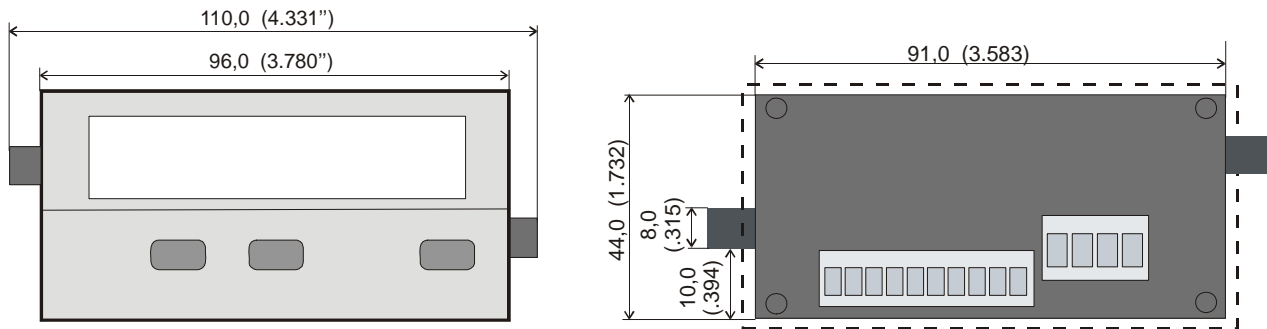

Panel cut out: 91.2 x 44.8 mm (3.590 x 1.764")

9.3. Technical data

| | |
|---|--|
| Power supply DC | : 24 V (17 – 30 V), approx. 100 mA (without aux. sensor supply) |
| DC current consumption (without sensors) | : 18 V : 110 mA, 24 V : 90 mA, 30 V : 80 mA |
| Aux. output for sensors | : 24 V DC, +/- 15%, 100 mA |
| Inputs | : 2 analogue inputs (+/-10 V, 0 ... +20 mA, 4 ... +20 mA) |
| Input impedance | : Current: Ri = 100 Ohms, Voltage: Ri = 30 kOhms |
| Resolution | : 14 bits (13 bits + sign) |
| Accuracy | : +/- 0.1%, +/- 1 digit |
| Relay outputs | : 2 relays (dry change-over each), 250 VAC / 1 A / 250 VA or 100 VDC / 1 A / 100 W |
| Serial interface | : RS 232 / RS 485, 600 (selectable) - 38 400 bauds |
| Ambient temperature | : Operation: 0° - 45° (32 – 113°F) Storage: -25° - +70° (-13 – 158°F) |
| Housing | : Norly UL94 – V-0 |
| Display | : 6 decades LED, high-efficiency orange, 15 mm (0.590") |
| Protection class | : IP65 (front), IP20 (rear) |
| Screw terminals | : Signal lines max. 1.5 mm ² (.0023 sq in) Relays max. 2.5 mm ² (.0039 sq in) |
| Minimum update time | : 50 msec (display) : 60 msec (switching outputs) |
| Weight | : approx. 250 g (8.9 oz) |
| Conformity and standards | : EMC 2004/108/EC: EN 61000-6-2 EN 61000-6-3 LV 2006/95/EC: EN 61010-1 |

9.4. Commissioning Form

| | |
|-----------|-------------|
| Date: | Software: |
| Operator: | Serial No.: |

| | | |
|------------------------|---|---|
| Basic Settings: | Operating mode: | Code: |
| | Brightness: | Linearization: |
| | Display Update [sec]: | Cmd key command: |
| | Source 1: Switch characteristics 1: Hysteresis 1: | Source 2: Switch characteristics 2: Hysteresis 2: |
| | Serial unit No.: | Serial format: |
| | Serial Baud Rate: | |

| | | | |
|-------------------------|----------------|---------|---------|
| Analogue Inputs: | | Input A | Input B |
| | Input range: | | |
| | Start value: | | |
| | End value: | | |
| | Decimal point: | | |
| | Filter: | | |
| | Offset : | | |

| | | |
|--|----------------------|--|
| Combined modes: (A+B, A-B, A:B, AxB) | Proportional factor: | |
| | Reciprocal factor: | |
| | Additive constant: | |
| | Decimal point: | |
| | | |

| | |
|-------------------------------|-----------------|
| Additional parameters: | |
| Preselection 1: | Preselection 2: |
| Serial Timer [s]: | Serial Mode: |
| Serial Code: | |

